LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.	KQ8E-A
产品规格 Specification	720*350*363mm
安装工具 Tool	安装人数Installer

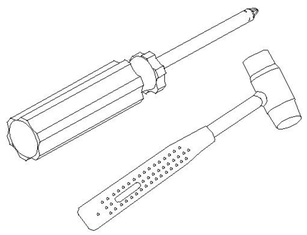

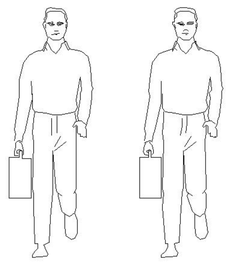

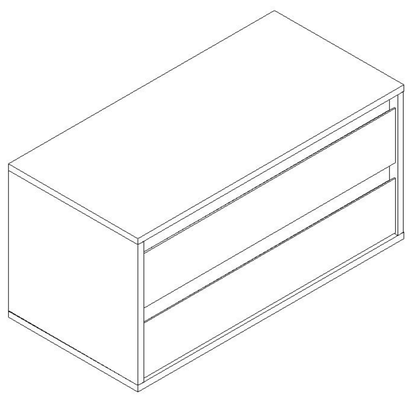

五金表/Hardware list

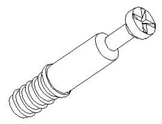 (A)*8 二合一螺杆 2-in-1-screw	 (B)*8 大三合一锁饼 3-in-1 large lock	 (C)*8 木榫Ø8x30mm Wood tenon	 (D)*4 灰色毛毡垫 Foot pad
(E)*29 白攻螺丝M3.5*12mm Tapping screw	 (F)*13 白攻螺丝M3.5*16mm Tapping screw	 (G)*6 背板扣 White buckle	(H)*2 U型卡扣 U-shaped buckle
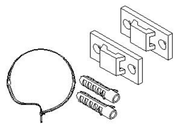 (I)*1 家具防倒器-白色 Anti-fall device	(J)*2 三节滚珠导轨10″ Three-section rail	(K)*13 塑料螺母 Plastic Nut	 (L)*13 白攻螺丝M4*10mm Tapping screw
 (M)*13 小二合一杆 2-in-1 small rod	 (N)*13 小三合一锁饼 3-in-1 small lock	(O)*2 亚克力 Acrylic	 (P)*6 镜钉 Mirror nail

部件表/Parts List

编号NO.	名称Name	规格(mm) Specification	数量QTY	材质Material
1	顶底板Top base board	720*350*15	2	三胺板 Melamine
2	右侧板Side board(R)	330*350*15	1	三胺板 Melamine
3	左侧板Side board(L)	330*350*15	1	三胺板 Melamine
4	背板Back board	698*340*5	1	三胺板 Melamine
5	抽屉面板 Drawer's top panel	684*128*15	2	三胺板 Melamine
6	抽屉后板 Drawer's Back board	638*78*12	2	三胺板 Melamine
7	抽屉右侧板 Drawer's side board(R)	295*78*12	2	三胺板 Melamine
8	抽屉左侧板 Drawer's side board(L)	295*78*12	2	三胺板 Melamine
9	抽屉底板 Drawer's Bottom board	648*291*5	2	三胺板 Melamine
10	抽屉底托条 Drawer's bottom bracket	281*58*12	2	三胺板 Melamine
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

KQ8E-A

安装方法
Installation method

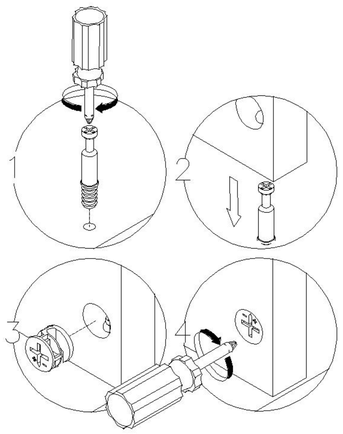

二合一 two-in-one

阀门开关(下压为开)
Valve switch(press down to open)



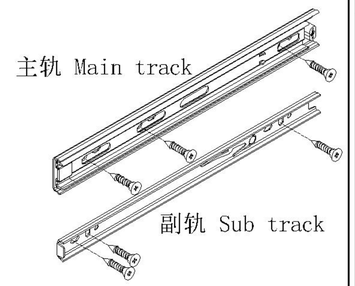

三节滚珠导轨-10″
Three-section rail

1

(M)*12

(N)*12

(L)*12

(K)*12

×2

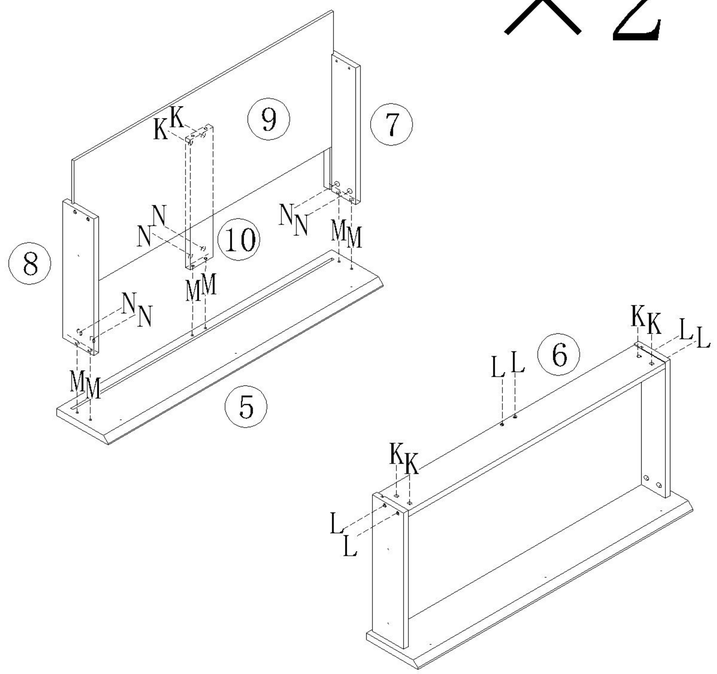

2

(E)*12

(F)*6

(J)*2

(0)*2

(P)*6

(F) (E)

×2

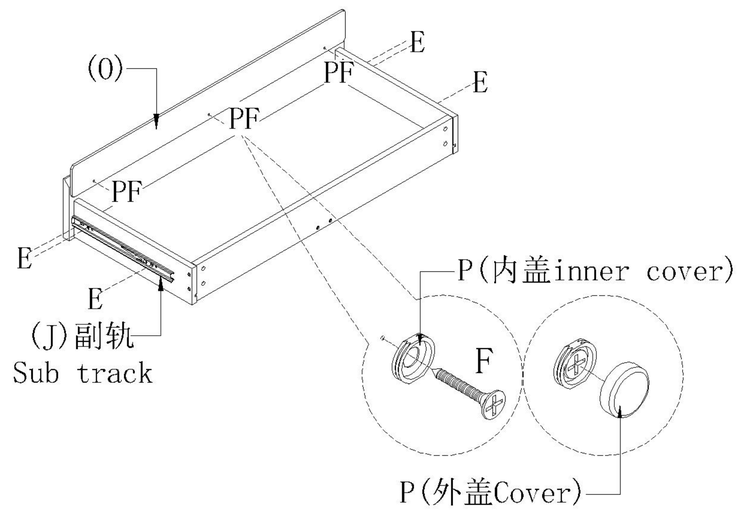

3

(A)*4

(B)*4

(C)*4

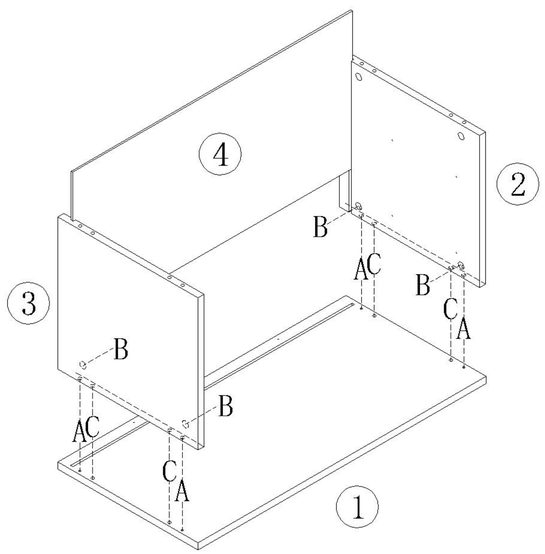

4

(A)*4

(B)*4

(C)*4

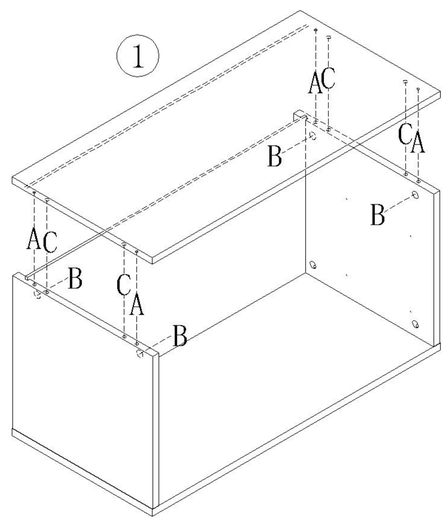

KQ8E-A

安装方法
Installation method

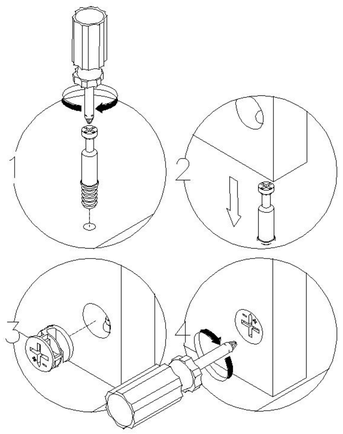

二合一 two-in-one

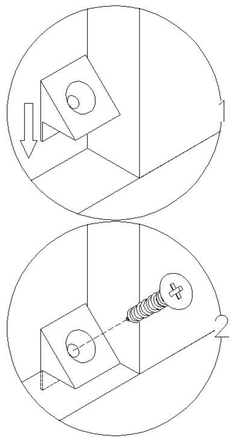

背板扣
Back Plate Buckle

阀门开关(下压为开)
Valve switch(press down to open)



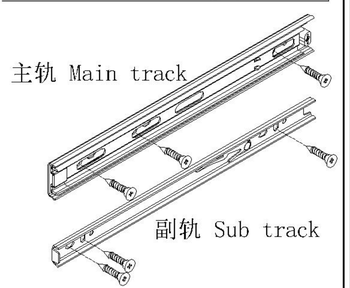

三节滚珠导轨-10″
Three-section rail

5

(E)*12

(J)*2

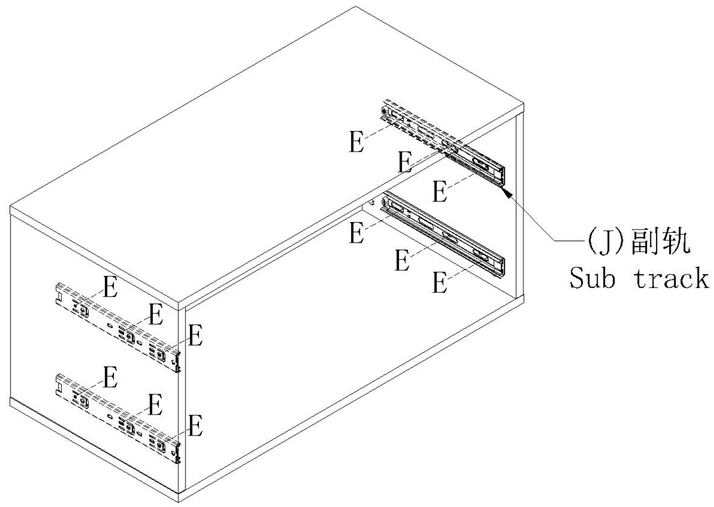

6

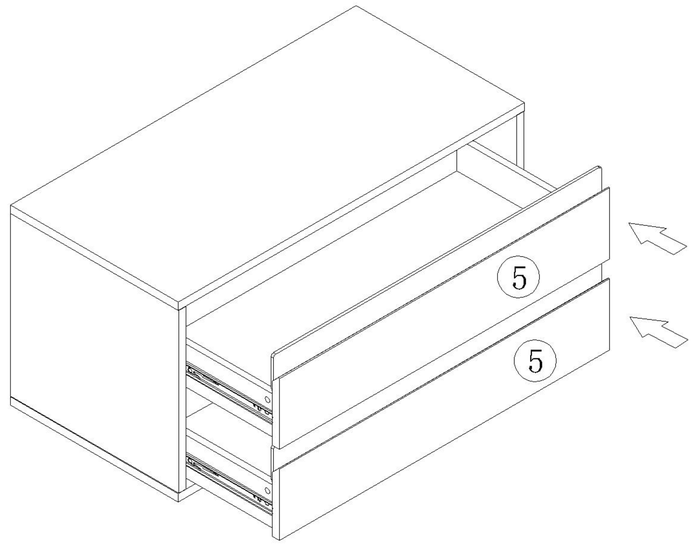

7

(F)*6

(G)*6

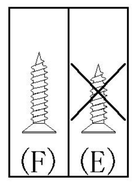

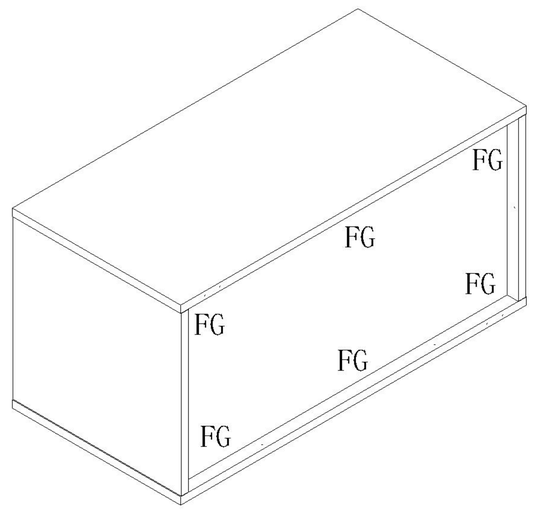

8

(D)*4

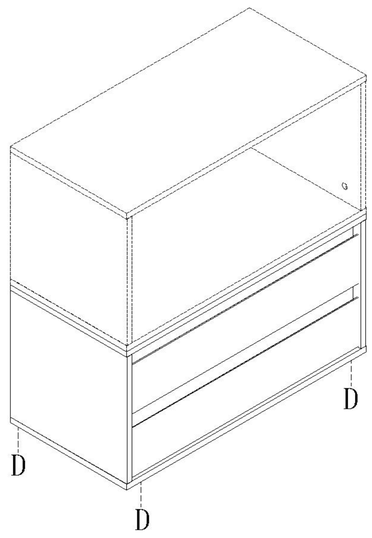

接触地面需安装五金(D)
Hardware installation required for contact with the ground (D)

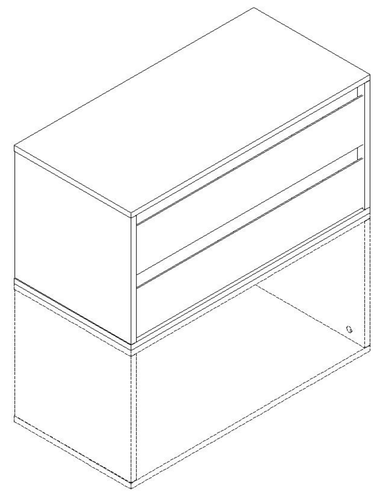

无接触地面不需安装五金(D)
No need to install hardware without touching the ground (D)

KQ8E-A

安装方法
Installation method

(E)*4

(H)*2

9

组合连接方式,如只购买单个柜体无需安装
Combination connection method, such as purchasing only a single cabinet without installation

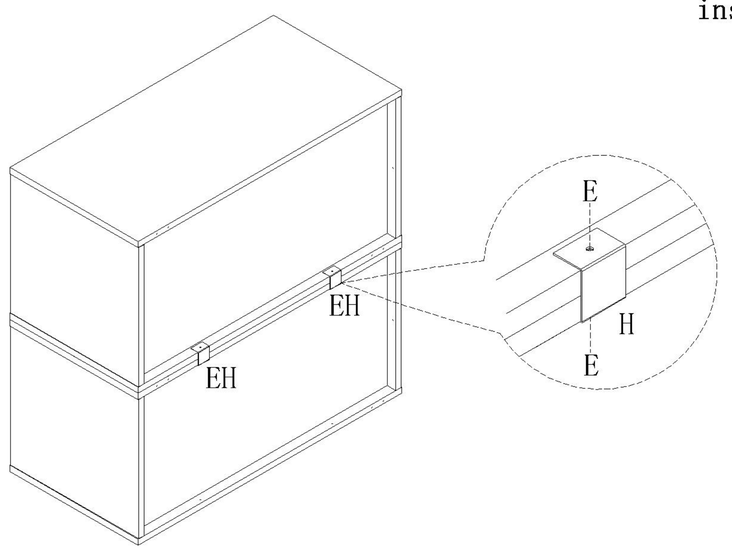

上下组合安装方式
Upper and lower combination installation method

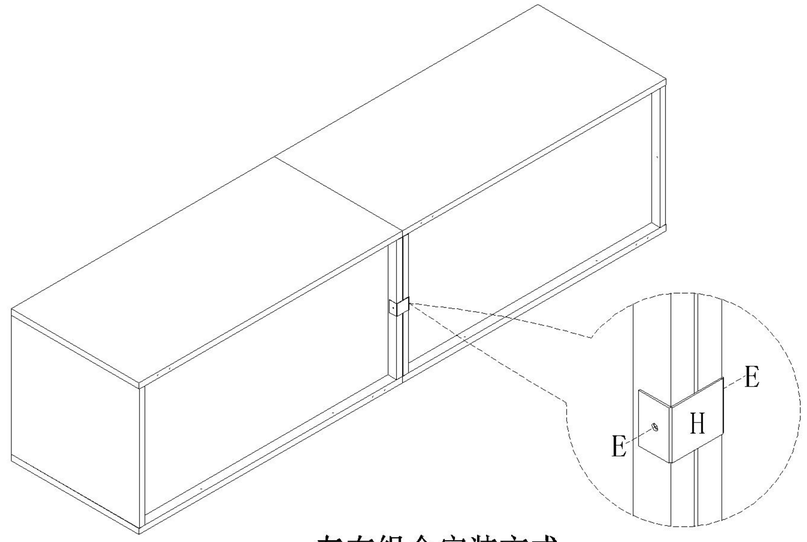

左右组合安装方式
Left and right combination installation method

(I)*1

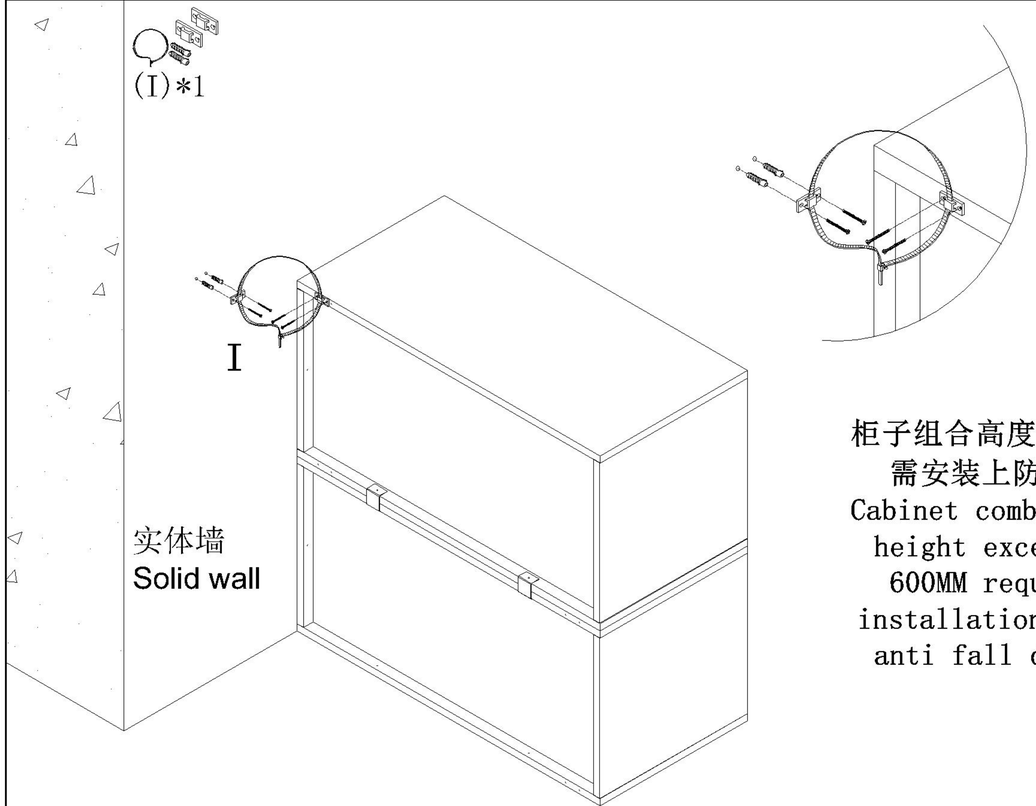

柜子组合高度超600MM
需安装上防倒器
Cabinet combination height exceeding 600MM requires installation of an anti fall device

10