①

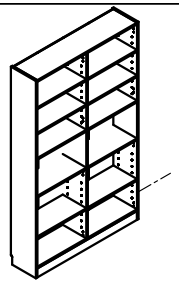

1×

②

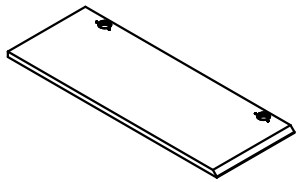

2×

③

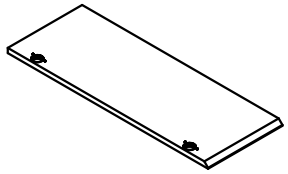

2×

A. Door hinge 1



4×

B.

（48+1）×

C. Door hinge 2

4×

M.



1×

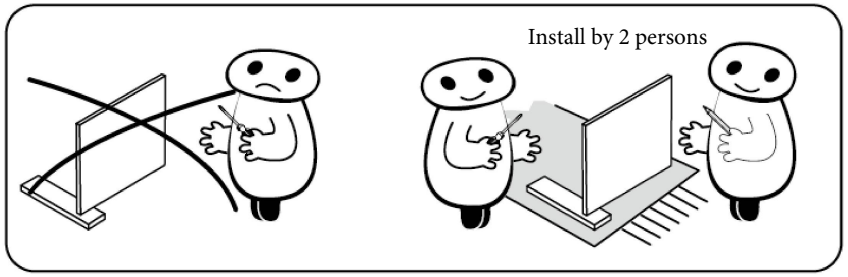

Attention:First of all, put a piece of carton or rug on the floor,and then begin to install the panels, so as to prevent the parts from scratch

Step 3

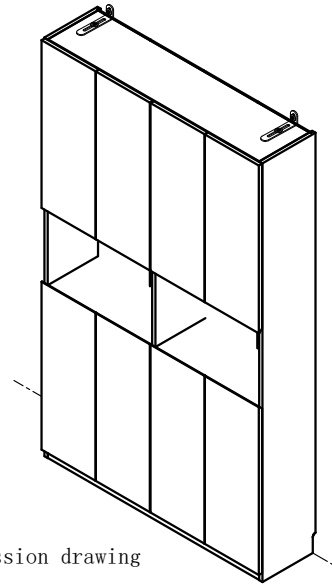

impression drawing

Step 1

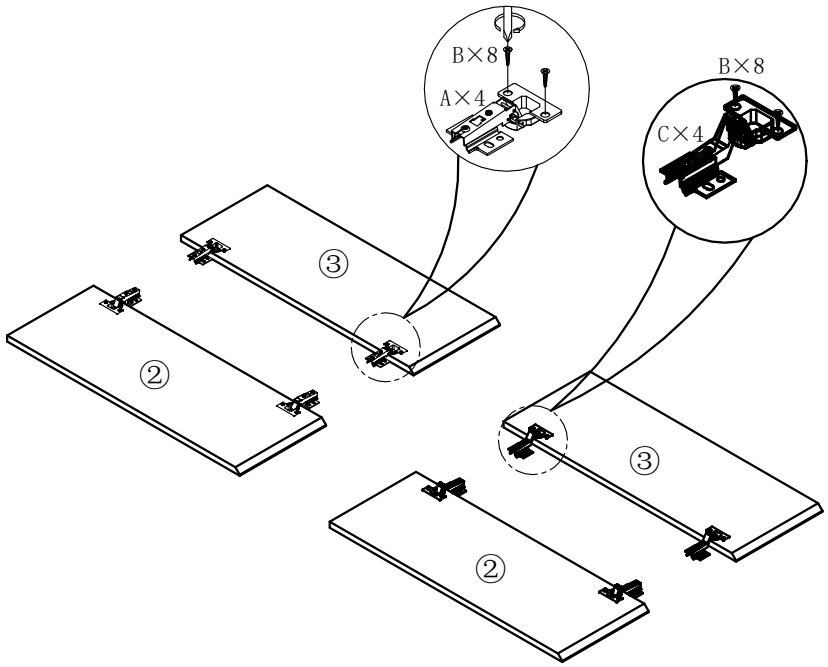

Step 2

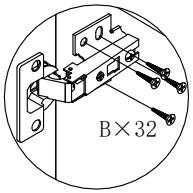

Note: The door panel can be installed above or below the site, and the side cabinet board is marked with lead holes!!!

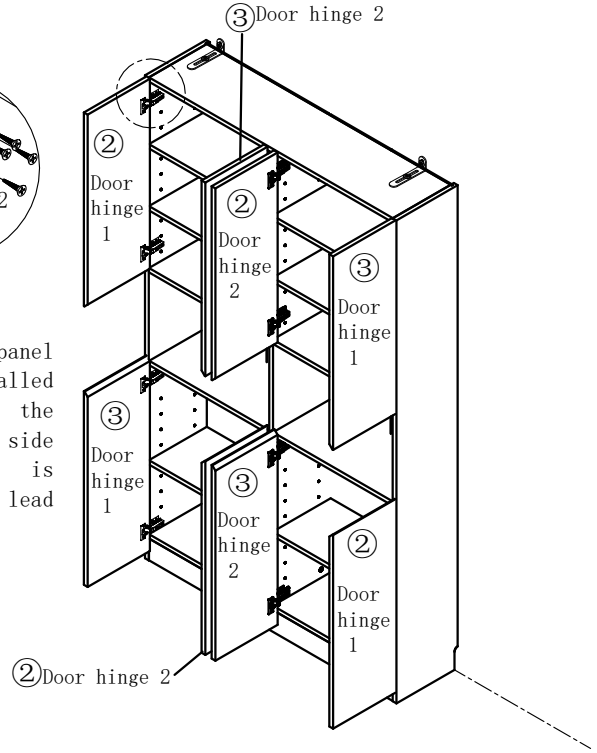

MODEL:	G5427-MB12
SIZE:	800*297*18H