













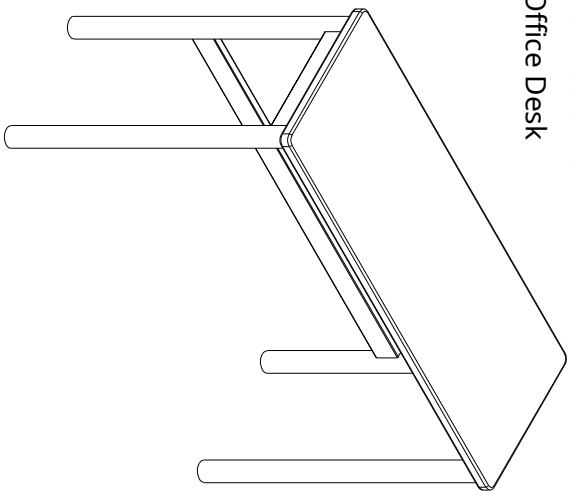


# Assembly Instructions

Solidwood Dolce Office Desk





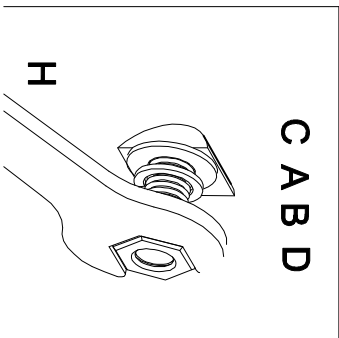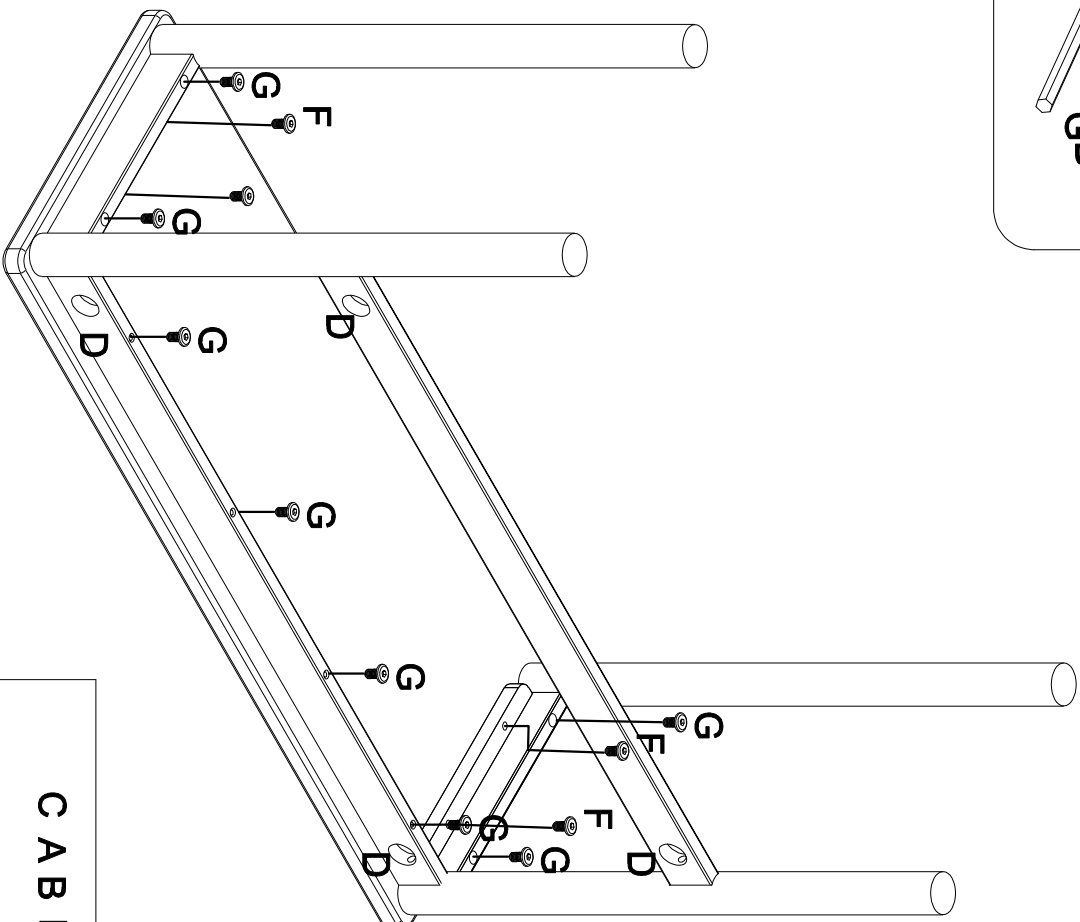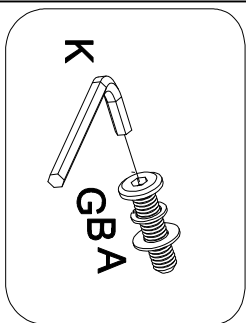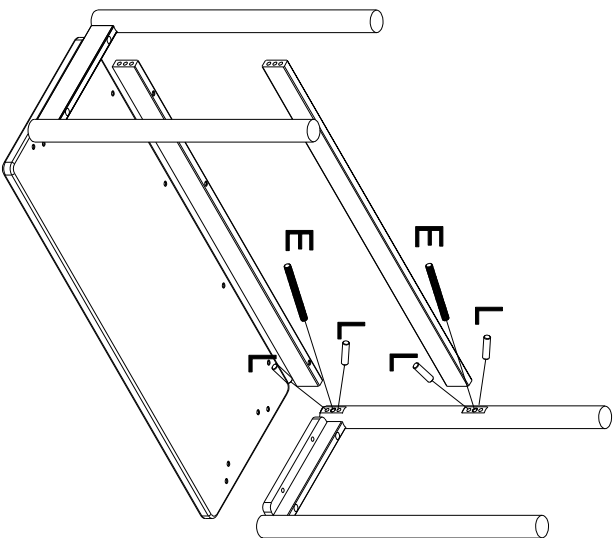

-  Ax16
-  Bx16
-  Cx4
-  Dx4
-  Ex4
-  Fx4
-  Gx8
-  Hx1
-  Kx1
-  Lx4



C A B D

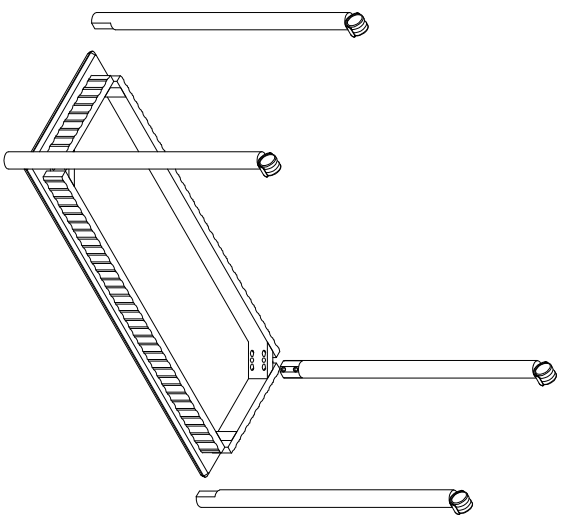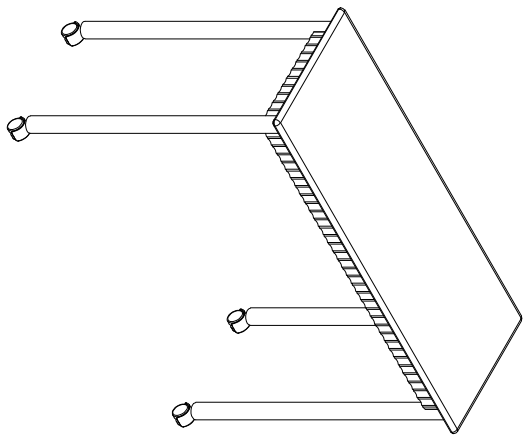H



-  A x 8
-  B x 8
-  G x 8
-  K x 1

