
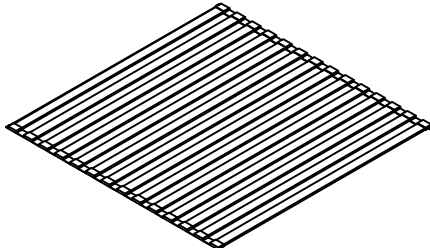
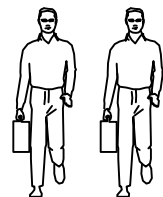



LINSY 林氏家居				如何区分床的左右方向？ How to distinguish the left and right directions of the bed?				图1：床头床边连接安装示意图 Figure 1: installation diagram of bedside connection				图2：卡扣组合连接安装示意图 Figure 2: installation diagram of snap combination connection				图3：卡扣安装示意图 Figure 3: schematic diagram of buckle installation				图4：床脚安装示意图 Figure 4: installation diagram of bed foo			
安装示意图/Assembly Instruction																Right 右床侧				Left 左床侧			
产品名称 Model NO.				TBC889				排骨架规格 Ranked bed slat specifications (1740*1800)															
产品规格 Specification				1800*2000																			
尺寸组合 Combined size				1890*2225*1060mm																			
配件表/Accessories list								部件表/Parts List															
编号 NO.	名称Name			图示Icon	数量QTY	编号 NO.	名称Name			规格 Specification	数量 QTY	材质material											
A	说明书(含安装图) Mounting Instruction (with drawing)				1	①	床头 The head of a bed			1890*385*910	1	实木方+实木多层板+海绵+猫爪皮 SOLID WOOD SQUARE + SOLID WOOD MULTI-LAYER BOARD + SPONGE + CAT'S CLAW SKIN											
B	Double hole small corner code (双孔小角码)				4	②	床侧*2 Side of the bed*2			1965*175*60	2	实木多层板+海绵+猫爪皮 SOLID WOOD MULTI-LAYER BOARD + SPONGE + CAT'S CLAW LEATHER											
C	Right angle code(直角码)				4	③	床尾 The end of the bed			1815*175*60	1	实木多层板+海绵+猫爪皮 SOLID WOOD MULTI-LAYER BOARD + SPONGE + CAT'S CLAW LEATHER											
D	(中档卡扣) Intermediate clip				2	④	中档 Bed middle			1930*65*125	1	实木多层板+海绵+魔术布 Solid wood multilayer board + sponge + Magic cloth											
E	(M6*25斜边十字螺杆) M6*25 bevel cross bolt				42	⑤	排骨条 Row frame			1740*100*12	14	实木 solid wood											
F	(M5*30自攻螺丝) M5*30 self tapping screw				16	⑥	排骨条卡扣 Ribs buckle				2	塑料 Plastic											
G	(枪灰色五金脚) Gun gray metal foot				4	排骨架效果图 Ranked bed slat renderings 																	
H	(银色床垫挡 L=28CM) SILVER MATTRESS STOP L=28CM				1																		
I	(M4*20自攻螺丝) M4*20 self tapping screw				16																		
J	(M8*25斜边十字螺杆) M8*25 bevel cross bolt				8																		
K	(12.5cm可调节塑料中脚) 12.5cm adjustable plastic middle foot				2																		
L	Φ8垫片 Φ8 gasket				8																		
M	(防撞螺杆) Mattress block				2																		
拆装排骨架配套配件 Accessories of disassembled row bed slat																							
						排骨架脚 The feet of ranked bed slat																	
						制图 Draw				Page NO. 页码 (2-1)													
						安装工具Tool								安装人数Installer									
						充电式手电钻 或者 十字螺丝刀 Cordless hand drill Phillips screwdriver																	
																							

STEP 1:

按图示方式，将床头、床边、床尾连接固定
Connect and fix the head, side and tail of the bed as shown in the figure

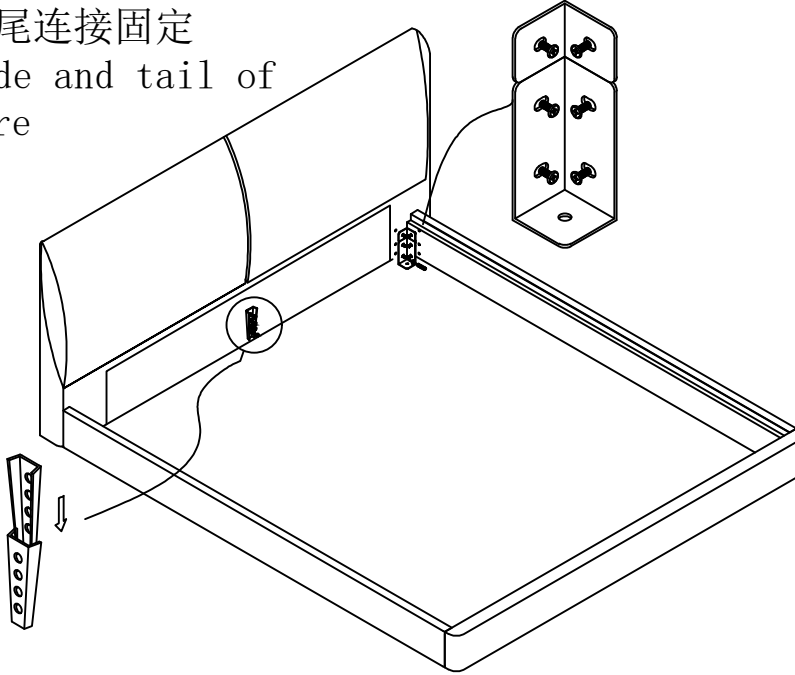


STEP 2:

按图示方式，将中档五金脚安装、再从上往下的方式扣住卡扣。
Install the mid-range hardware feet as shown in the figure, and then fasten the buckle from top to bottom.

按图示方式，将四个五金脚安装固定
Install and fix the four hardware feet as shown in the figure


按图示方式，将两个可调节中脚分别安装固定在床头和中档
According to the figure, install and fix the two adjustable middle feet respectively at the head of the bed and the middle

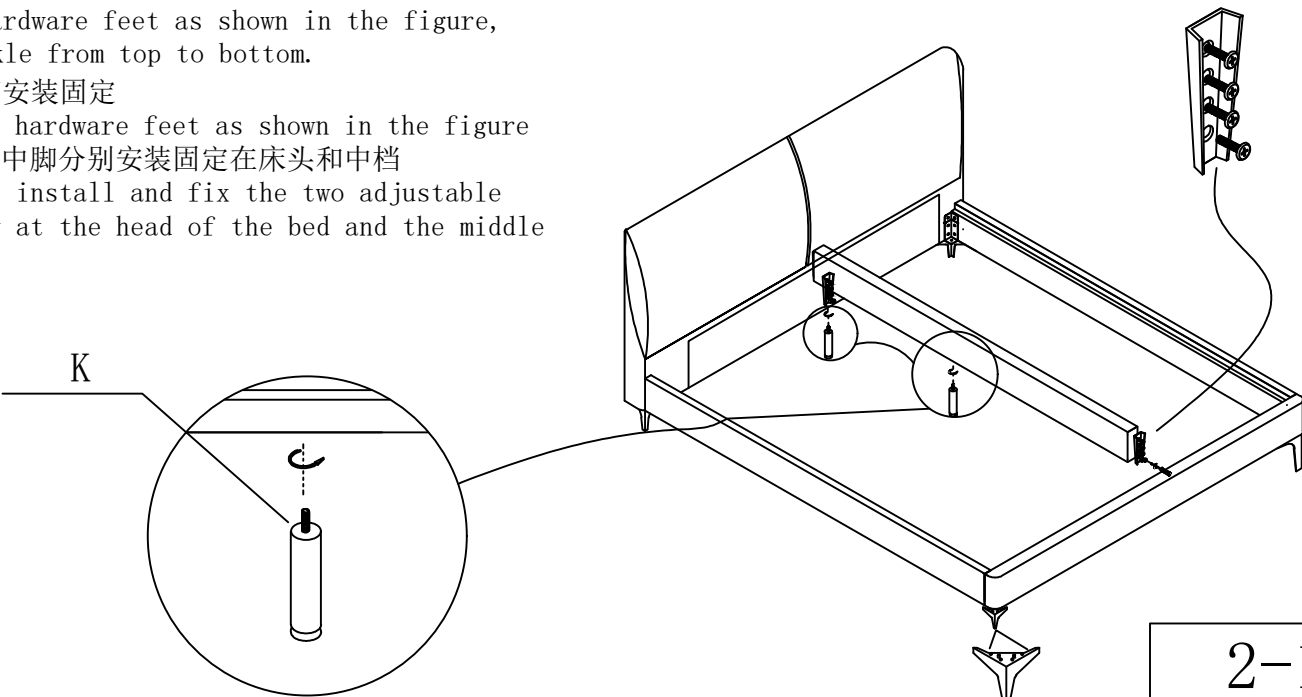


2-1

STEP 3:


按图示方式，将床垫档安装在床尾上。
Install the mattress stop on the end of the bed as shown in the figure.

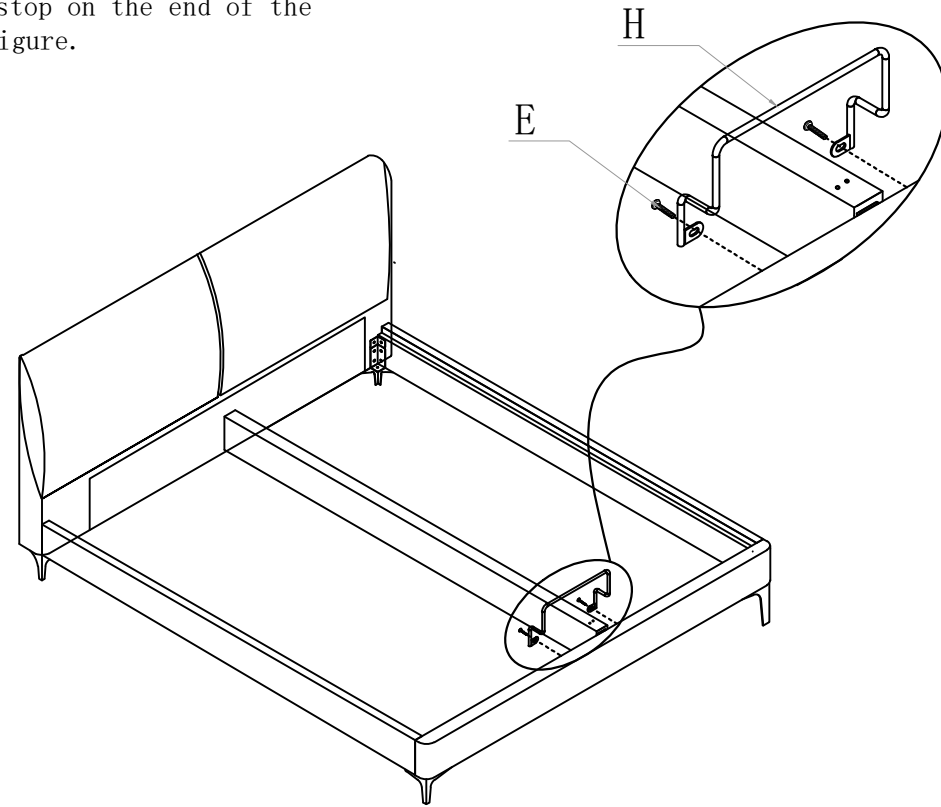**STEP 5:**

按图示方式，将防撞螺杆安装至床头背面。
Install the anti-collision screw to the back of the head of the bed as shown.

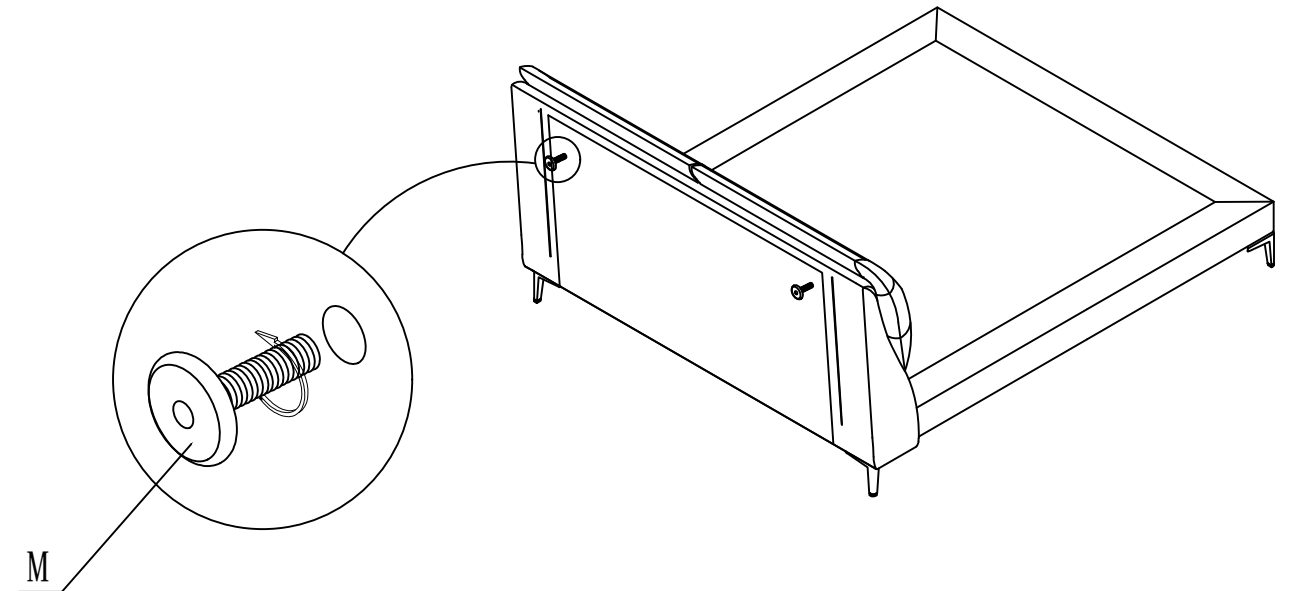**STEP 4:**

按图示方式，将排骨架平铺后、安装固定。
As shown in the figure, the row frame shall be tiled, installed and fixed.

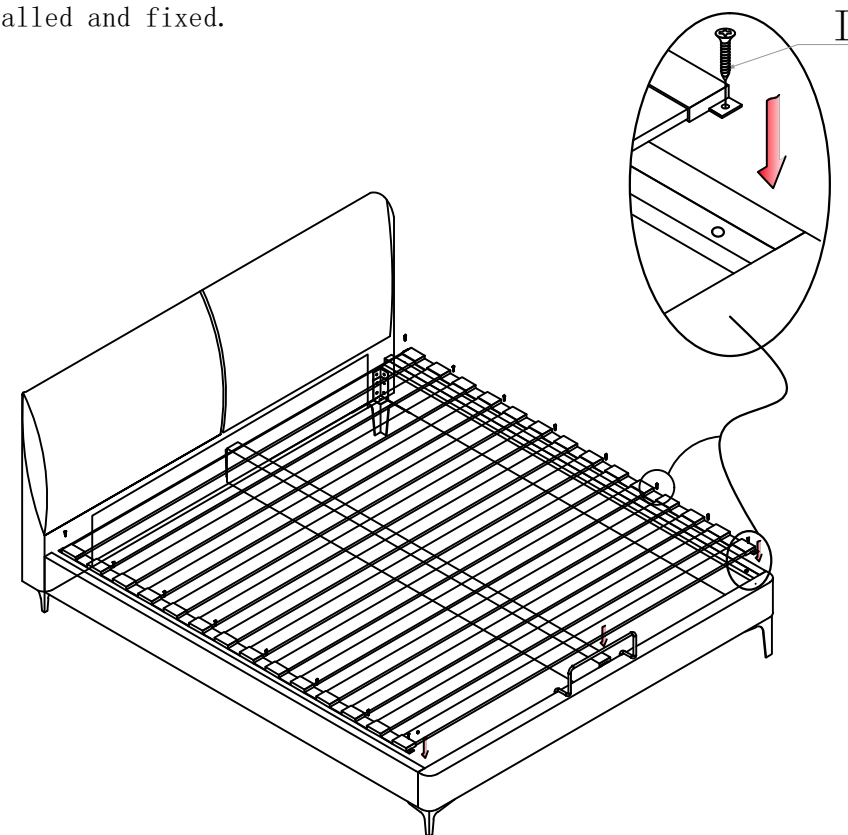**STEP 6:**